



Installation Guide for 2014-21 Toyota Tundra LUXX-Series LED Tail lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX TAIL LIGHTS** for your 2014-21 Toyota Tundra

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tail lights screws
- **STEP 2.** Unplug the sockets and remove tail lights

PART II INSTALL ALPHAREX TAIL LIGHTS


- **STEP 1.** Plug the sockets and install tail lights
- **STEP 2.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Torx
Screwdriver



1/4 Ratchet



1/4 Extension

T30
Star Torx



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.

Whenever working on your vehicle, always make sure your vehicle is OFF and parked.



STEP 1. REMOVE TAIL LIGHTS SCREWS

Open the trunk gate and begin by removing the screws securing the tail lights.



Utilize a Torx screwdriver to remove the top and bottom T30 screws from each side of the tail lights.




Carefully pull the tail lights outward to remove them.




STEP 2. UNPLUG THE SOCKETS AND REMOVE TAIL LIGHTS

To remove the tail light, disconnect the light sockets completely.

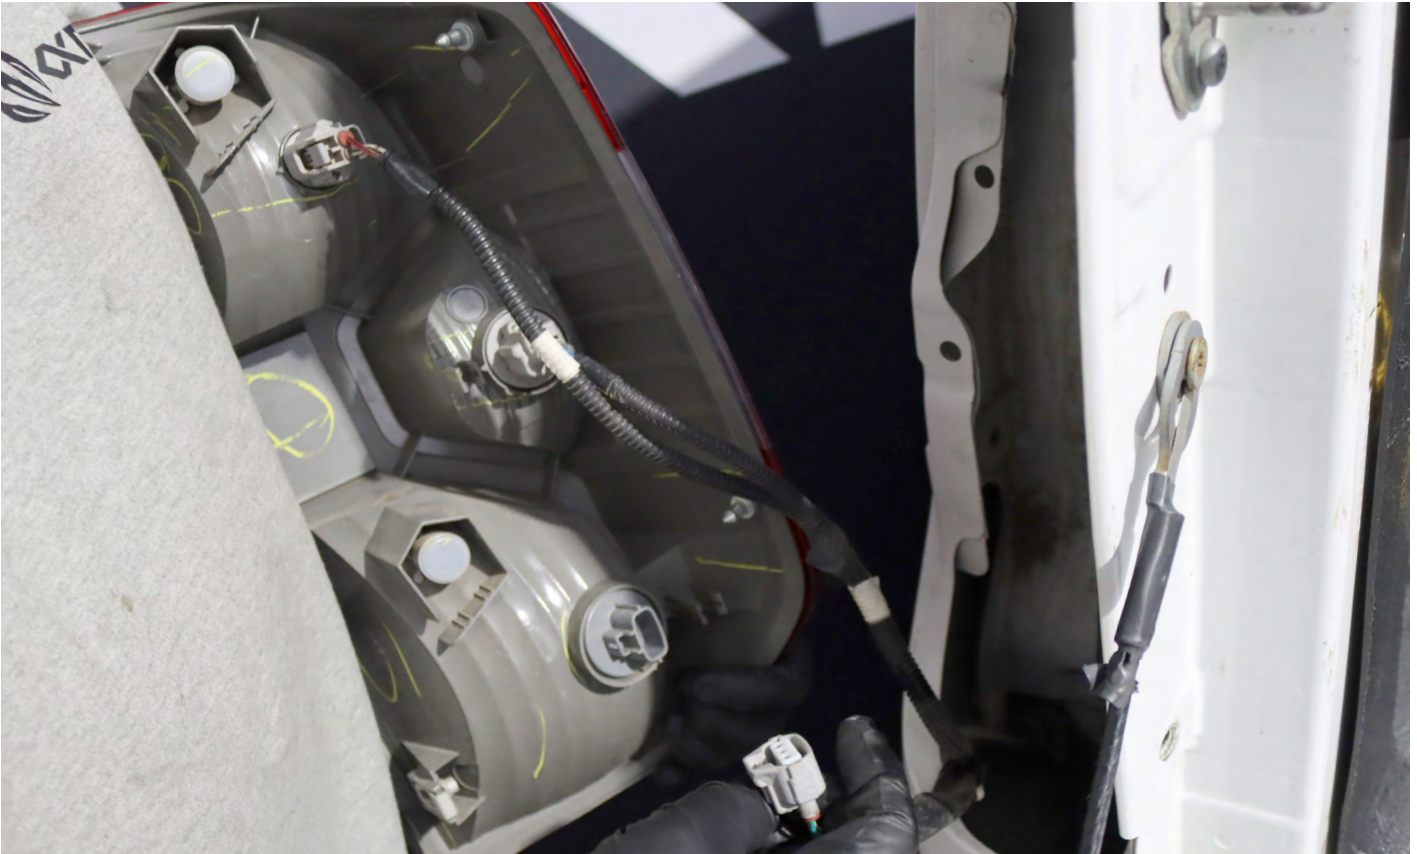



Repeat the same steps for the other side of the tail light for the removal process.

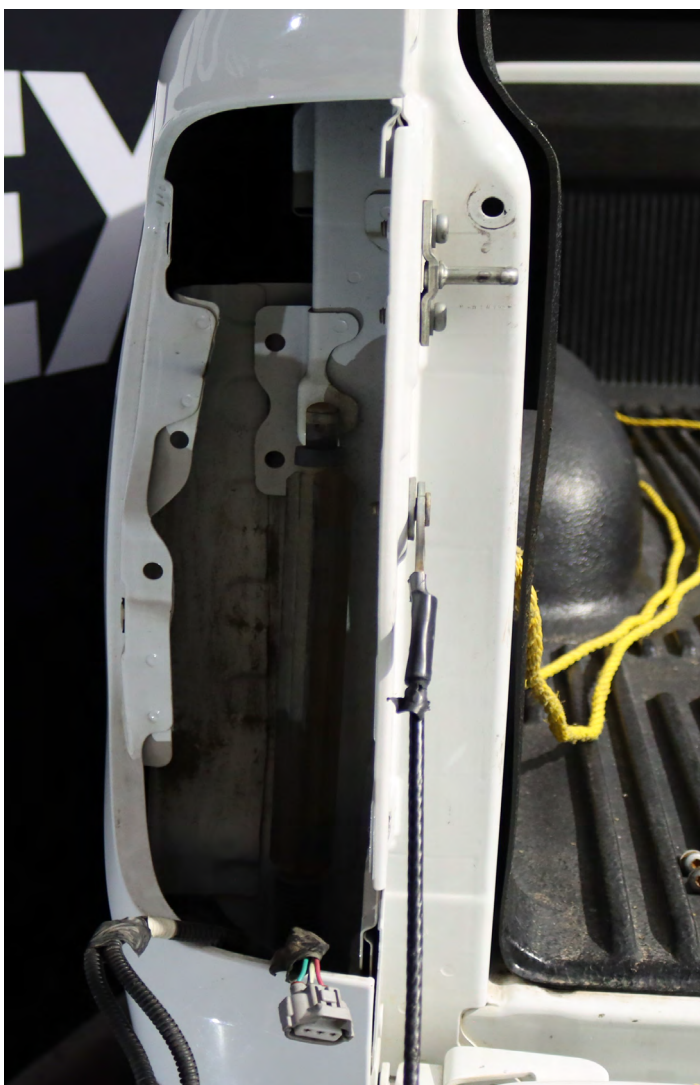

PART II INSTALL ALPHAREX TAIL LIGHTS




STEP 1. PLUG THE SOCKETS AND INSTALL TAIL LIGHTS

First, connect the reverse light bulb socket directly to the bottom of the new ALPHAREX tail light.

DO NOT USE DIELECTRIC GREASE!



Secondly, connect the PARKING/BRAKE light socket directly into the new tail lights. Then, plug the TURN SIGNAL light socket at the top. **DO NOT USE DIELECTRIC GREASE!** Follow the same steps for the other side of the tail light.

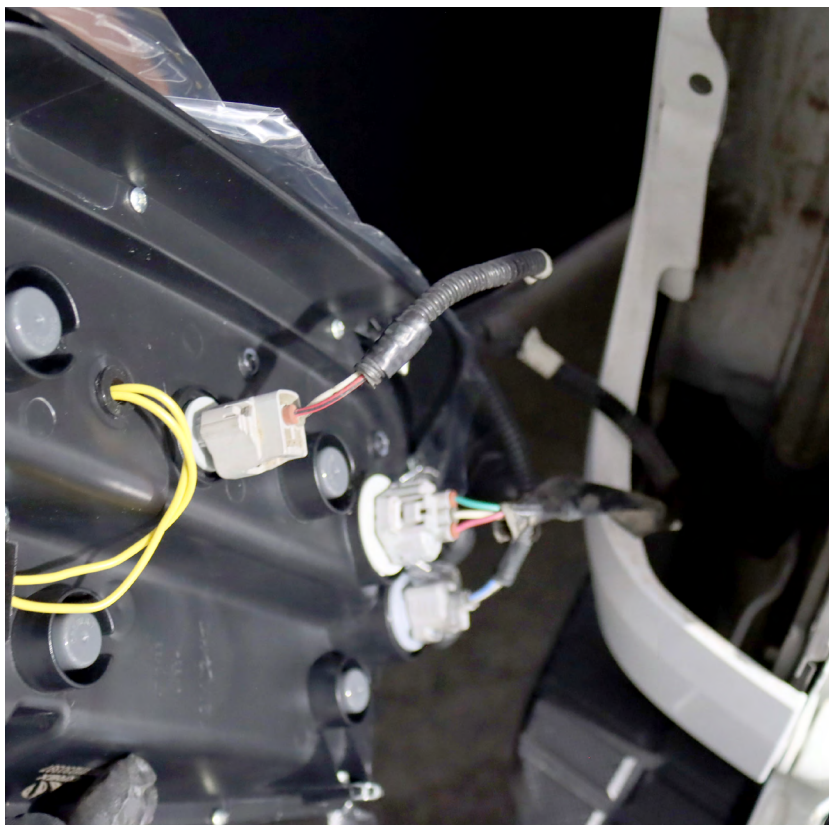

After plugging in the sockets into the new ALPHAREX tail lights, proceed to reverse the removal process to install the new tail lights into the vehicle.



Utilize a Torx screwdriver to tighten the 2 X T30 screws for each side.



STEP 2. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **14-21 Toyota Tundra LED TAIL LIGHTS**.

